


# Spanjoletter för fönster

Vägledning för urfräsning. Mått i mm.


## S1605 med 2 sidkolvar

L	H	a	b
390	195	80	310
490	245	80	410
590	295	125	465
690	345	125	565
790	395	200	590
890	445	200	690
990	495	200	790
1090	545	200	890
1190	595	200	990

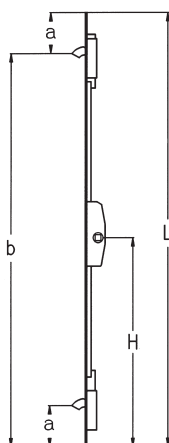

## S1605 med 3 sidkolvar


L	H	a	b	c
1290	645	200	1090	580
1390	695	200	1190	630
1490	745	200	1290	680

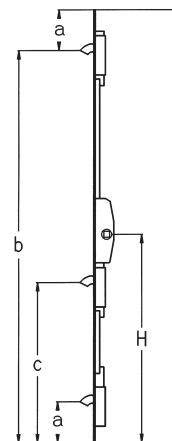

## Måttbeställda spanjoletter


### S1601 med 2 sidkolvar

L	a
500-589	80
590-999	125

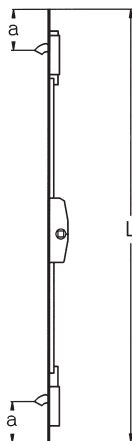


### S1601 med 3 sidkolvar

L	a	b
1000-1899	125	65

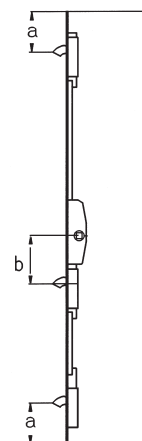

### S1605 med 2 sidkolvar

L	a
500-589	80
590-999	125

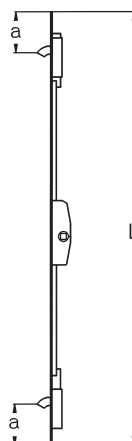

### S1605 med 3 sidkolvar

L	a	b
1000-1899	125	65

